



Egg Cocoon Hanging Swing Chair, Wicker Rattan Basket, Steel Frame



Model No. DG60

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully. Note the safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.



Refer to
instruction
manual



Wear gloves

 
 
 
Specification

Egg/Cocoon Basket Size (H x W x D):..... 112 x 94 x 62cm

Frame Size (H x base Ø): 195 x 95cm

Maximum User Weight: **110kg Total.**


Contents

Number		Amount	Number		Amount	Number		Amount
1		1PC	F		8PC	7		1PC
2		1PC	G		2PC	I		4PC
A		2PC	G1		2PC	M		1PC
B		2PC	H		4PC	N		4PC
C		8PC	J		1PC	O		1PC
D		16PC	K		1PC	P		6PC
E		1PC	L		1PC	Q		1PC
3		1PC	5		1PC	R		1PC
4		1PC	6		1PC	S		4PC
						T		4PC

Safety Instructions


- **WARNING!** The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- Ensure the item is assembled properly and securely.
- To avoid tipping, use on firm, level ground.
- **DO NOT** expose to high temperature heat sources i.e. barbecue.
- **DO NOT** stand on furniture, and respect the **MAXIMUM WEIGHT LIMIT OF 110KG TOTAL.**
- **DO NOT** let children play in the chair.
- **DO NOT** let children use the chair without adult supervision.

Assembly

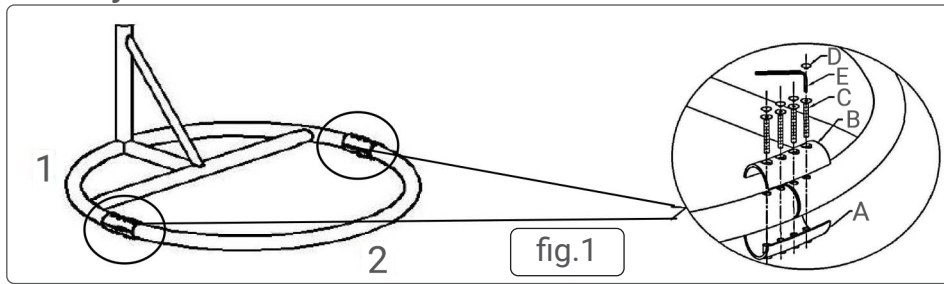


BASE ASSEMBLY (FIG.1)



- On a level floor join parts (1) and (2) to create base support.
- Secure using the bolt, washer, and nut set (labelled A to D in fig.1). Tighten firmly using Allen key (part E).

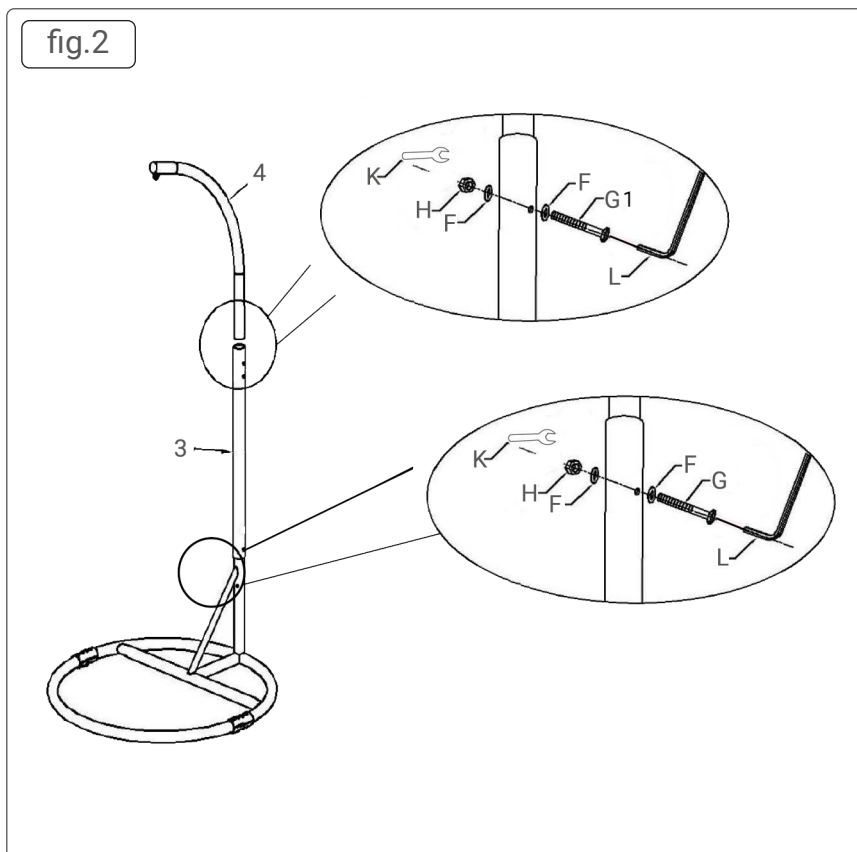

ATTACH THE MAIN SUPPORT POLE (FIG.2)

- Fix lower post (3) to base support fixing (1+2).
- Fix curved support pole (4) to lower post (3) and ensure all fixings (labelled F-L in fig.1). Fully tighten fixings and ensure frame is stable.
- **JOIN CHAIR HALVES (FIG.3):** (parts 5 and 6) and use fixings (labelled L, S, D, N, T).

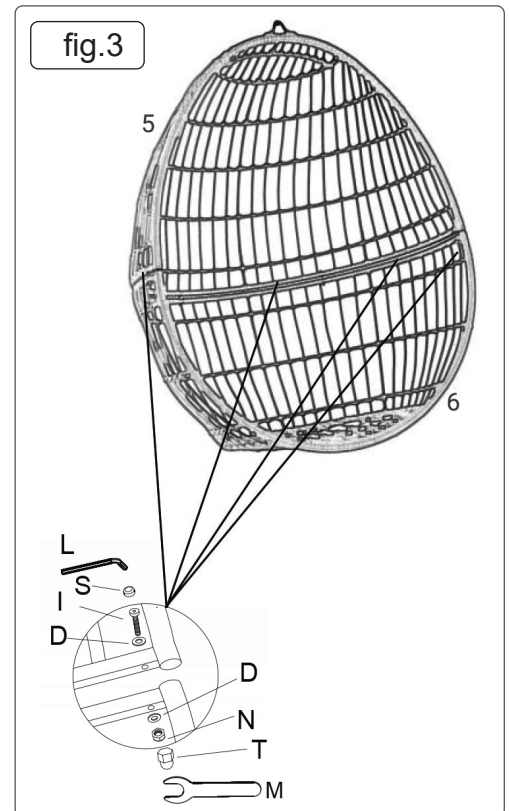

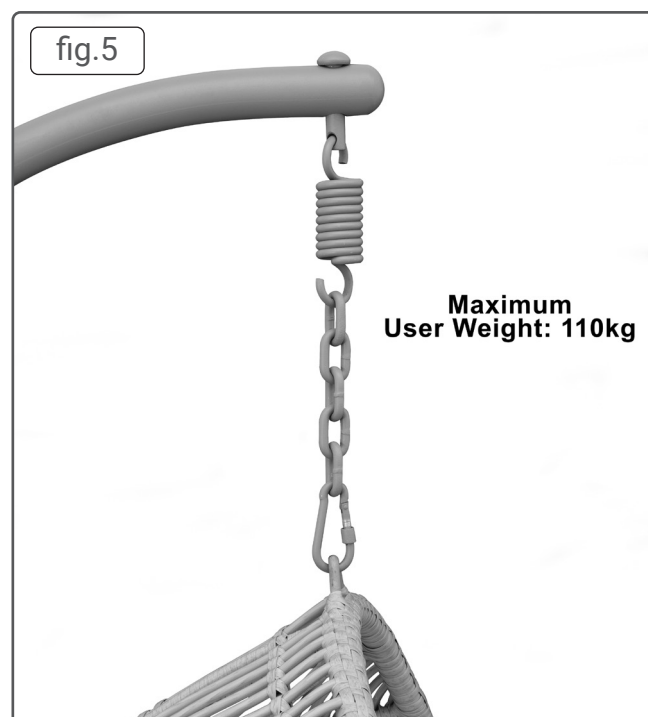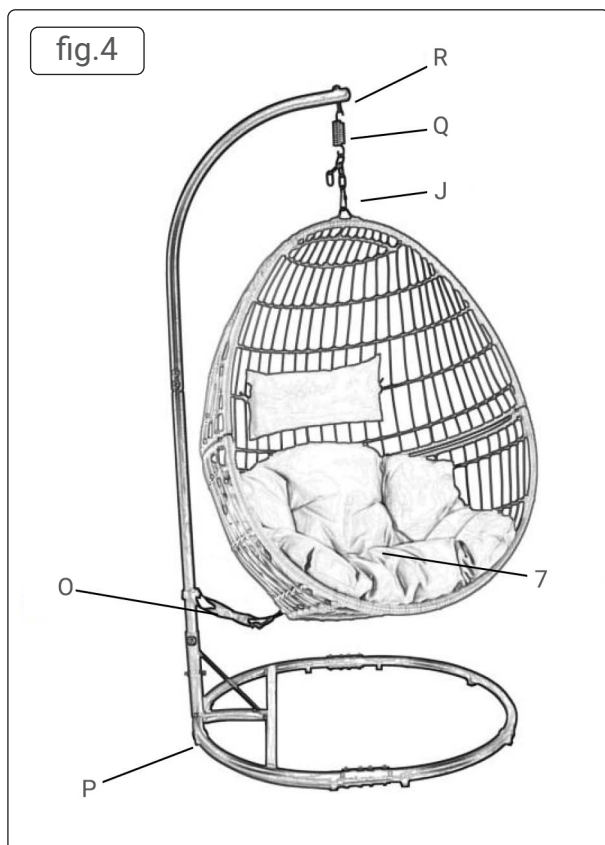

ATTACH THE CHAIN AND SUSPENSION SPRING (FIG.4)

- Attach hanging chain (J) to hanging loop on top of chair.
- Attach Spring (Q) to top of curved support pole (4) using pin (R).
- Lift egg chair with chain attached and hang to hook (Q) spring support (see fig.5). Make sure it is stable.
- Place the seat cushion (7) on chair.
- Perform a final Safety Check before use to ensure all bolts and nuts are tight. Confirm the chair hangs freely and does not wobble.
- **DO NOT** exceed the maximum user weight of 110 kg.

Maintenance

- Regularly check all fixings are secure
- Any modifications of this appliance may be dangerous and are not permitted. **DO NOT** alter parts supplied by the manufacturer.



Environment Protection

Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of it in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.