



MINI DIGITAL THERMOMETER

MODEL NO: VS906.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN
Swallowing can lead to chemical burns, perforating of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.





1. SAFETY

- ☐ **WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- ☒ Familiarise yourself with the application and limitations of the product, as well as potential hazards peculiar to the use of the thermometer.
- ☒ Keep the thermometer clean for best and safest performance.
- ☒ Store the thermometer in its protective cover when not in use.
- ☒ When not in use, store in a safe, dry, childproof area.
- ☒ **DO NOT** use equipment for any purpose other than that for which it is designed.
- ☒ **DO NOT** allow untrained persons to operate the thermometer.
- ☒ **DO NOT** use the thermometer to test objects above 250°C.

2. INTRODUCTION

Digital thermometer with sensor located in stainless steel probe tip. Measures in °C and °F with hold function for convenience. Covers -40°C to +250°C (-40°F to +482°F) for varied applications. Ideal for checking air conditioning performance. Powered by 1.5V cell for immediate use (Supplied).

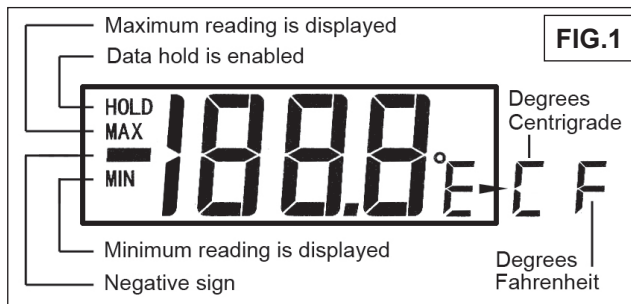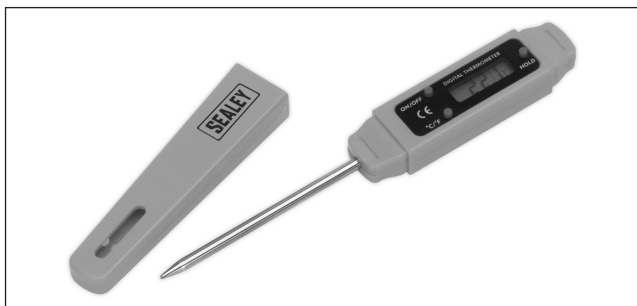

3. SPECIFICATION

Model No	VS906.V2
Accuracy	±3%
Temperature Range	-40°C to +250°C (-40°F to +482°F)

4. OPERATION

- 4.1. Remove the protective cover from the probe. Stow the cover on the other end of the thermometer.
- 4.2. Turn the thermometer **ON** by pressing the **ON/OFF** button. The display will show all its symbols momentarily (FIG.1) and then revert to zero. Once the tip of the probe has sensed the temperature the display will change from zero to that temperature.
- 4.3. Switch between Centigrade and Fahrenheit by pressing the **°C/°F** button.
- 4.4. Press the hold button to hold the current reading on the display (the '**HOLD**' symbol will begin to flash). To see the maximum reading of all the readings taken since switching on press **HOLD** again ('**MAX**' will flash on the display). To see the minimum reading of all the readings taken since switching on press **HOLD** again ('**MIN**' will flash on the display). To return to temperature measurement mode press **HOLD** again. This cycle can be repeated at any time.
- 4.5. Turn the thermometer **OFF** by pressing the **ON/OFF** button again. **NOTE:** Current readings are not held in memory when the thermometer is turned off.
- 4.6. If the thermometer is on but not in use it will turn itself off after approximately 20 minutes.
- 4.7. If the measured temperature is over 250°C the display will show '**H - -**'.
- 4.8. If the measured temperature is under -40°C the display will show '**L - -**'.

5. MAINTENANCE

- 5.1. After use, clean the probe with warm water and replace the protective cover.
- 5.2. If the display appears fuzzy or faded the battery should be replaced. (1.5V, LR44 or equivalent)
- 5.3. **BATTERY FITTING**
- 5.4. Remove the battery from the thermometer by rotating the circular battery compartment cover on the back of the casing. Lift off and tip out the battery.

6. BATTERY SAFETY

- ❑ **WARNING! Button and Coin Battery Ingestion**
Button or coin batteries can become stuck in a child's oesophagus (food pipe) without obvious symptoms. This makes them particularly dangerous.
Possible signs to watch for include:
Coughing, gagging, or excessive drooling.
Appearing to have a stomach upset or virus.
Vomiting.
Pointing to the throat or stomach.
Pain in the abdomen, chest, or throat.
Unusual tiredness or lethargy.
Behaviour changes (quieter, clingier, or "not themselves").
Loss of appetite or reduced eating.
Avoiding solid food or being unable to eat it.
These symptoms may come and go, with pain increasing and then easing.
URGENT WARNING SIGNS
Vomiting fresh (bright red) blood
If this happens, seek immediate medical attention.
IMPORTANT
Because symptoms are often unclear, it is vital to:
Keep button and coin batteries out of reach of children.
Be cautious with spare and "flat" batteries.
Check household items that contain these batteries.
Always act quickly if ingestion is suspected.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



BATTERY REMOVAL - SEE SECTION 5

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk