

**EN**Original Instructions  
Version 1 – June 2026

# TRAILER JACK

**64294**

## 1. Intended Use

This heavy-duty manual trailer jack with an integral swivel mounting system is designed to support and handle trailers with heavy nose weights.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

Read this manual in full before using this product and retain it for future use. Always use the latest version of the manual. Please visit [drapertools.com/manuals](http://drapertools.com/manuals) for the latest version.

## 2. Specification

Stock No.:	64294
Part No.:	TT129
Maximum load capacity	900kg
Maximum travel height	254mm
Net. weight	5.10kg

## 3. Health and Safety information

**Important:** Read all the Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user, the product or the trailer.

- **DO NOT** exceed the maximum load capacity of 900kg.
- This jack is designed for lifting and lowering trailers during hitching/unhitching **only**. It should not be used as a permanent support for a trailer or especially when working underneath it.
- **NEVER** position any part of body under this product or supported load.
- **ALWAYS** use the jack on solid, level ground.
- Ensure the trailer wheels are chocked, and the handbrake is engaged before operating the jack.
- **DO NOT** modify the jack and only use for the purpose it was designed for.
- The bracket must be securely bolted to a suitable location on the trailer chassis before operation.
- **ALWAYS** retract the jack fully and swivel it into the horizontal storage position before moving the trailer.
- When the jack is not being use, store it in a secure place out of the reach of children.
- **DO NOT** allow children to play on or around this jack while supporting a load.
- Inspect the condition of the jack prior to storage and before each use. **DO NOT** use if any parts are missing, corroded or damaged.

## 4. Basic Operation

**Important:** Before operating this product, read and understand all the safety instructions listed in this manual.

1. Ensure the bracket is securely clamped to a suitable location on the trailer frame/tongue to allow the jack to be fully extended, retracted and swivelled into a horizontal position for transport.
2. Pull the swivel mount clamp back to rotate the jack from its horizontal storage position to the vertical operating position (Fig.1).
3. Turn the height adjustment handle to lift or lower the jack to the required height. (Fig.2 & Fig.3)
4. Return to the storage position after use.



Fig. 1



Fig. 2

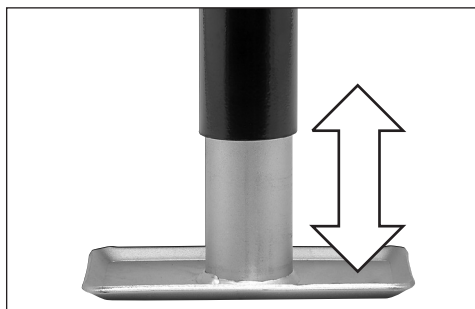


Fig. 3

### Contact Details

#### Draper Tools Limited

Hursley Road  
Chandler's Ford  
Eastleigh  
Hampshire  
SO53 1YF  
UK

**Website:** [drapertools.com](http://drapertools.com)

**Email:** [sales@drapertools.com](mailto:sales@drapertools.com)

**Product Helpline:** +44 (0) 23 8049 4344

**Telephone Sales Desk:** +44 (0) 23 8049 4333

**General Enquiries:** +44 (0) 23 8026 6355

#### Draper Tools Europe B.V.

Oude Graaf 8  
6002 NL  
Weert  
Netherlands

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.