




**DRAPER**<sup>®</sup>

**STORMFORCE**

68 PIECE

# AIR TOOL KIT

83431

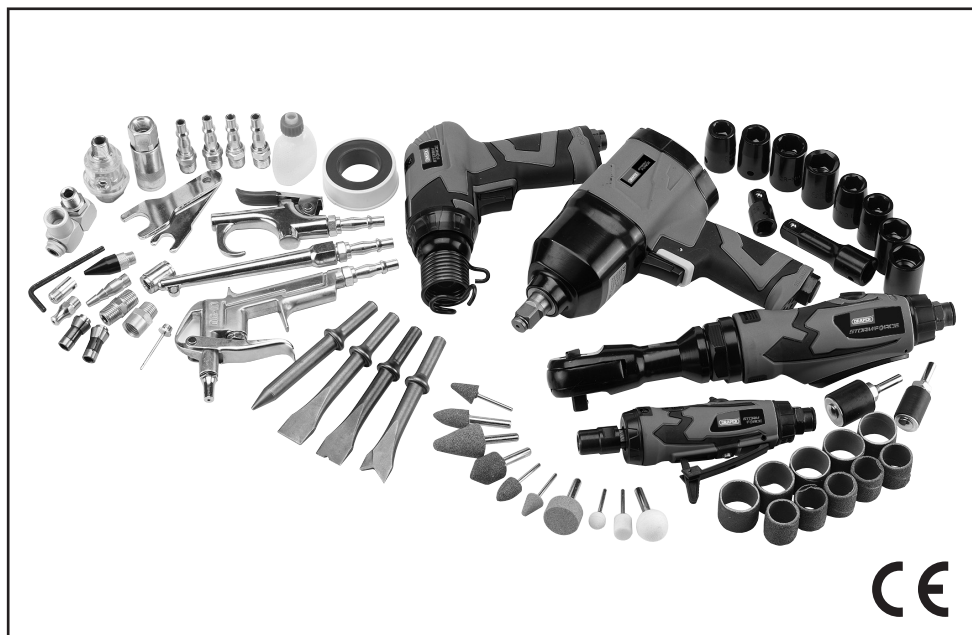

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product.

Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.

# 1. TITLE PAGE

---

## 1.1 INTRODUCTION:

USER MANUAL FOR: 68 Piece Air Tool Kit

**Stock No:** 83431

**Part No:** SFATK/68

## 1.2 REVISIONS:

---

**Date first published July 2019.**

---

---

---

---

As our user manuals are continually updated, users should make sure that they use the very latest version.

**Downloads are available from:** <http://drapertools.com/manuals>

Draper Tools Limited  
Hursley Road  
Chandler's Ford  
Eastleigh  
Hampshire  
SO53 1YF  
UK

**Website:** [drapertools.com](http://drapertools.com)

**Product Helpline:** +44 (0) 23 8049 4344

**General Fax:** +44 (0) 23 8026 0784

## 1.3 UNDERSTANDING THIS MANUALS SAFETY CONTENT:

**WARNING!** – Information that draws attention to the risk of injury or death.

**CAUTION!** – Information that draws attention to the risk of damage to the product or surroundings.

## 1.4 COPYRIGHT © NOTICE:

Copyright © Draper Tools Limited.

Permission is granted to reproduce this publication for personal and educational use only. Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases this copyright notice must remain intact.

---

# 2. CONTENTS

---

## 2.1 CONTENTS

### 1. TITLE PAGE

1.1 INTRODUCTION .....	2
1.2 REVISION HISTORY .....	2
1.3 UNDERSTANDING THIS MANUAL.....	2
1.4 COPYRIGHT NOTICE.....	2

### 2. CONTENTS

2.1 CONTENTS .....	3
--------------------	---

### 3. WARRANTY

3.1 WARRANTY .....	5
--------------------	---

### 4. INTRODUCTION

4.1 SCOPE .....	6
4.2 SPECIFICATION .....	6

### 5. HEALTH AND SAFETY INFORMATION

5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE.....	7
5.2 GENERAL SAFETY INSTRUCTIONS FOR COMPRESSED AIR.....	8
5.3 ADDITIONAL SAFETY INSTRUCTIONS FOR AIR IMPACT WRENCHES.....	9
5.4 ADDITIONAL SAFETY INSTRUCTIONS FOR AIR DIE GRINDER TOOLS .....	10
5.5 RESIDUAL RISK .....	10

### 6. TECHNICAL DESCRIPTION

6.1 IDENTIFICATION .....	11
--------------------------	----

### 7. UNPACKING AND CHECKING

7.1 PACKAGING .....	13
7.2 WHAT'S IN THE BOX.....	14

### 8. ASSEMBLY

8.1 AIR TOOL OIL SPECIFICATION .....	15
8.2 RECOMMENDED AIR SUPPLY SET UP .....	15
8.3 CONNECTION TO THE AIR SUPPLY .....	16

### 9. OPERATION AND USE

#### IMPACT WRENCH

9.1 TRIGGER SWITCH .....	17
9.2 FORWARD/REVERSE SPEED SELECTION .....	17
9.3 ANVIL.....	17

#### RATCHET WRENCH

9.4 TRIGGER SWITCH .....	18
9.5 FORWARD/REVERSE SELECTION.....	18
9.6 SPEED REGULATION .....	18
9.7 ANVIL.....	19
9.8 EXHAUST PORT .....	19

#### DIE GRINDER

9.9 INSERT TOOL .....	20
9.10 TRIGGER .....	20
9.11 AIR FLOW (SPEED) SELECTOR.....	20

## 2. CONTENTS

---

- AIR HAMMER
  - 9.12 CONNECTING CHISELS ..... 21
  - 9.13 TRIGGER SWITCH ..... 21
  - 9.14 DUST AND SWARF ..... 21
- 10. MAINTENANCE
  - 10.1 EVERY-DAY MAINTENANCE CHECKS ..... 22
  - 10.2 AFTER USE MAINTENANCE CHECKS ..... 22
- 11. TROUBLESHOOTING
  - 11.1 TROUBLESHOOTING GUIDE ..... 23
- 12. DISPOSAL
  - 12.1 DISPOSAL ..... 24
- 13. EXPLANATION OF SYMBOLS
  - 13.1 EXPLANATION OF SYMBOLS ..... 25
- DECLARATION OF CONFORMITY ..... ENCLOSED



## 3. WARRANTY

---

### 3.1 WARRANTY

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact

**Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF. England.**

**Telephone Sales Desk: (023) 8049 4333 or Product Help Line (023) 8049 4344.**

A proof of purchase **must** be provided with the tool.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This warranty period covering parts/labour is 6 months from the date of purchase except where tools are hired out when the warranty period is 90 days from the date of purchase. This warranty does not apply to any consumable parts, any type of battery or normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agent.

**Note:** If the tool is found not to be within the terms of warranty, repairs and carriage charges will be quoted and made accordingly.

This warranty applies in lieu of any other warranty expressed or implied and variations of its terms are not authorised.

Your Draper warranty is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the warranty period.

Please note that this warranty is an additional benefit and does not affect your statutory rights.

**Draper Tools Limited.**

# 4. INTRODUCTION

## 4.1 SCOPE

Low noise, low vibration air tools manufactured with casings made from composite plastic. Ergonomic handles and lightweight design assist in preventing fatigue and the ‘cold-sink’ effect on the user.

## 4.2 SPECIFICATION

	Ratchet	Wrench
Anvil size .....	1/2"	1/2"
Maximum torque.....	90Nm/66lb-ft	340Nm/250lb-ft
Max. operating air pressure .....	90psi (6.2bar)	90psi (6.2bar)
Average air consumption.....	5.0cfm (141L/min)	4.0cfm (113L/min)
Revolutions per minute (no load) .....	160R/min	7,500R/min
Minimum air line size.....	3/8"ID	3/8"ID
Air inlet .....	1/4" BSP	1/4" BSP
Sound pressure level* .....	94dB(A)	87dB(A)
Sound power level** .....	105dB(A)	98dB(A)
Vibration level.....	2.6m/s <sup>2</sup>	3.3m/s <sup>2</sup>
Weight (air tool only).....	1.3kgs	1.8kgs
		Hammer
Chisel shank opening .....		10.18mm (0.401")
Blows per min.....		4500
Stroke length .....		43mm
Max. operating air pressure .....		90psi (6.2bar)
Average air consumption.....		4.0cfm (113L/min)
Minimum air line size .....		3/8"ID
Air inlet .....		1/4" BSP
Sound pressure level* .....		95dB(A)
Sound power level** .....		106dB(A)
Vibration level.....		20m/s <sup>2</sup>
Weight (air tool only).....		0.95kg
		Grinder
Collet size (max.).....		6mm
Offset .....		0°
Revolution per minute (no load) .....		25,000R/min
Max. operating air pressure .....		90psi (6.2bar)
Average air consumption.....		4cfm (113L/min)
Min. air line size (inner Ø) .....		3/8" (10mm)
Air inlet .....		1/4"BSP
Sound pressure level* .....		97dB(A)
Sound power level** .....		108dB(A)
Vibration level.....		0.9m/s <sup>2</sup>
Weight (air tool only).....		0.29kg

### Warning!

- Wear safety glasses and ear defenders.

\* Continuous A-Weighted Sound Pressure Level at the workstation in accordance to prEN ISO 15744:1999 and declared according to EN ISO 4871.

\*\* A-Weighted Sound Power Level in accordance to prEN ISO 15744:1999 and declared according to EN ISO 4871.

## 5. HEALTH AND SAFETY INFORMATION

---

### 5.1 GENERAL SAFETY INSTRUCTIONS FOR POWER TOOL USE

When using any type of power tool there are steps that should be taken to make sure that you, as the user, remain safe.

Common sense and a respect for the tool will help reduce the risk of injury.

**Read the instruction manual fully.** Do not attempt any operation until you have read and understood this manual.

**Most important you must know how to safely start and stop this machine, especially in an emergency.**

**Keep the work area tidy and clean.** Attempting to clear clutter from around the machine during use will reduce your concentration. Mess on the floor creates a trip hazard. Any liquid spilt on the floor could result in you slipping.

**Find a suitable location.** If the machine is bench mounted; the location should provide good natural light or artificial lighting as a replacement. Avoid damp and dust locations as it will have a negative effect on the machine's performance. If the machine is portable; do not expose the tool to rain. In all cases do not operate power tools near any flammable materials.

**Keep bystanders away.** Children, onlookers and passers by must be restricted from entering the work area for their own protection. The barrier must extend a suitable distance from the tool user.

**Disconnect and house all power tools that are not in use.** An air tool should never be left unattended while connected to the power supply. They must be housed in a suitable location, away locked up and from children.

**Do not overload or misuse the tool.** All tools are designed for a purpose and are limited to what they are capable of doing. Do not attempt to use a power tool (or adapt it in any way) for an application it is not designed for. Select a tool appropriate for the size of the job. Overloading a tool will result in tool failure and user injury: This covers the use of accessories.

**Dress properly.** Loose clothing, long hair and jewellery are all dangerous because they can become entangled in moving machinery: This can also result in parts of body being pulled into the machine. Clothing should be close fitted, with any long hair tied back and jewellery and neck ties removed. Footwear must be fully enclosed and have a non-slip sole.

**Wear personal protective equipment (PPE).** Dust, noise, vibration and swarf can all be dangerous if not suitably protected against. If the work involving the power tool creates dust or fumes; wear a dust mask. Vibration to the hand, caused by operating some tools for longer periods must be protected against. Wear vibration reducing gloves and allow long breaks between uses. Protect against dust and swarf by wearing approved safety goggles or a face shield. These are some of the more common hazards and preventions; however, always find out what hazards are associated with the machine/work process and wear the most suitable protective equipment available.

**Do not breathe contaminated air.** If the work creates dust or fumes; connect the machine (if possible) to an extraction system either locally or remotely. Working outdoors can also help if possible.

**Move the machine as instructed.** If the machine is hand held, do not carry it by the air line. If the product is heavy; employ a second or third person to help move it safely or use a mechanical device. Always refer to the instructions for the correct method.

**Do not overreach.** Extending your body too far can result in a loss of balance and you falling. This could be from a height or onto a machine and will result in injury.

**Maintain your tools correctly.** A well maintained tool will do the job safely. Replace any damaged or missing parts immediately with original parts from the manufacturer. As applicable; keep blades sharp; moving parts clean, oiled or greased; handles clean; and emergency devices working.

## 5. HEALTH AND SAFETY INFORMATION

---

**Wait for the machine to stop.** Unless the machine is fitted with a safety brake; some parts may continue to move due to momentum. Wait for all parts to stop; then disconnect it from the air line before making any adjustments, carrying out maintenance operations or just finishing using the tool.

**Remove and check setting tools.** Some machinery requires the use of additional tools or keys to set, load or adjust the power tool. Before starting the power tool always check to make certain they have been removed and are safely away from the machine.

**Prevent unintentional starting.** Before connecting any machine in to the air supply, make sure the switch is in the OFF position. If the machine is portable; do not hold the machine near the switch and take care when putting the machine down; that nothing can operate the switch.

**Concentrate and stay alert.** Distractions are likely to cause an accident. Never operate a power tool if you are under the influence of drugs (prescription or otherwise), including alcohol or if you are feeling tired. Being disorientated will result in an accident.

**Have this tool repaired by a qualified person.** This tool is designed to confirm to the relevant international and local standards and as such should be maintained and repaired by someone qualified; using only original parts supplied by the manufacturer: This will ensure the tool remains safe to use.

### 5.2 GENERAL SAFETY INSTRUCTIONS FOR COMPRESSED AIR

Following Safety instructions should be strictly followed. Failure to do so may result in accidents, equipment malfunctioning, serious personal injury and / or loss of life.

Compressed air is a source of considerable energy. When handling products dealing with compressed air, the following precautions must be taken to prevent accidents.

1. Ensure that compressed air is not blocked or in contact with any part of your body.
2. Before connecting any pneumatic equipment to the compressed air supply, all mounted fittings, piping assemblies and electrical connections should be checked for security. All plastic plugs in the equipment used for protection during shipping should be removed.
3. No piping alterations, removal of fittings, repairing of equipment etc. Should be attempted with air supplies connected. Air and electrical supplies must be disconnected before beginning any adjustment, maintenance or dismantling of equipment.
4. The maximum allowable operating pressures, temperature, flows etc. must be strictly observed. Failure to do so might result in catastrophic failure of equipment, and result in serious personal injury and / or death. Refer to individual catalogues for this information, and any other operating or application limitations.

#### **WARNING:**

1. Compatibility of pneumatic equipment  
Ensuring the compatibility of the procured FRL equipment is the responsibility of the person who designs the Pneumatic system and/ or System specifications. This should be based on specifications or after analysis and / or tests to meet specific requirements.
2. Repair & Maintenance  
Assembly, handling, or repair of pneumatic systems should be performed by only trained and experienced operators.
3. Safety First  
Do not service machinery / equipment or attempt to remove any component until safety is confirmed.
  - i. Inspection and maintenance of machinery / equipment should only be performed after confirmation that both compressed air and electrical supply have been positively disconnected and all residual compressed air in the system has been completely exhausted to the atmosphere.
4. Contact the manufacturer if equipment is to be used in any of the following conditions:

## 5. HEALTH AND SAFETY INFORMATION

---

- i. Equipment is to be used in conditions beyond the given specifications, or if equipment is to be used outdoors.
- ii. Equipment is to be used in conjunction with atomic energy, railroad, air navigation, automobiles or related vehicles, medical equipment or safety equipment.
- iii. In applications that adversely effect humans, animals, or property requiring special safety analysis.

### 5.3 ADDITIONAL SAFETY INSTRUCTIONS FOR AIR IMPACT WRENCHES

**Important:** Draper Tools Limited recommends that this machine should not be modified or used for any application other than that for which it was designed. If you are unsure of its relative applications do not hesitate to contact us in writing and we will advise you.

- Power tools shall not be used in potentially explosive atmospheres unless specifically designed for that purpose;
- Unexpected tool movement due to reaction forces or breakage of inserted tool or reaction bar may cause injuries;
- Power tools shall be isolated from the energy source before changing or adjusting the inserted tool;
- **Warning!**
  - There is a risk of crushing by torque between a reaction bar and the workpiece;
  - There is a risk of loose clothing, hair etc., being caught in the rotating spindle of the power supply tool;
  - There is a risk of being injured if hands are not kept away from the reaction bar, specially observed when unscrewing in confined work spaces;
  - There is a risk of being injured if hands are not kept away from the impact sockets;
  - There is a risk of danger to persons from high speed splinters being emitted from impact wrenches in the case of impact socket failure.
  - There is a risk of being injured by whipping air hoses.
- Unexpected direction of inserted tool movement can cause a hazardous situation;
- Use only impact sockets and adaptors which are in good condition and are intended for use with power tools;
- Adopt a suitable posture to counteract normal or unexpected movement of the power tool due to reaction forces from the power assembly tool;
- Release the start and stop device in the case of an interruption of the energy supply;
- Only lubricants recommended by the manufacturer shall be used;
- Release pressure when not in use. Disconnect from air line;
- Impact wrenches are not torque wrenches and are not designed or capable of installing fasteners to a specified torque. For fasteners requiring a specific torque, install the fastener to well below the required value then complete the task with a hand torque wrench to avoid damaging the fastener or workpiece.
- Ensure the anvil ring is correctly maintained and if damaged or missing, is replaced immediately before work commences. Missing or damaged anvil rings may lead to sockets detaching from the wrench while rotating at high speed.
- Only use accessories specifically designed and hardened for impact use. Do not use standard chrome type hand tool sockets as they will shatter and splinter causing injury.
- Do not modify this impact wrench in any way.
- Do not carry or move the tool by the air line.
- When starting or finishing the removal and installation of fasteners there is a risk of crushing between the tool and the workpiece due to sudden movement or reaction forces.

## 5. HEALTH AND SAFETY INFORMATION

---

### 5.4 ADDITIONAL SAFETY INSTRUCTIONS FOR AIR DIE GRINDER TOOLS

- **WARNING:**
- Only insert tools of the correct shaft diameter shall be used.
- Cutting off wheels and routing cutter wheels shall not be used.
- The allowed speed of the insert tool must be higher than the speed of the die grinder.
- The allowed speed of the mounted point must be lowered due to the increase of the length of the shaft between the end of the collet and the mounting point (overhang). Make sure that the minimum gripping length of 10mm is observed.
- Working in certain materials creates emission of dust and fumes, causing a potentially explosive environment.
- Beware of mismatching the insert tool shaft to the collet size. The shaft should be a snug fit before tightening the collet and should never require pressure to insert. Excessively loose shafts may result in the bit being thrown during use.
- Beware of excessive vibration levels due to improper mounting or damaged insert tool. Stop immediately and rectify the cause.
- Attention shall be paid to ensure the maximum permissible pressure is not exceeded. The use of an inline water separator, lubricator and pressure regulator should be used to control the pressure of the air being supplied to the power tool.
- The insert tool and output shaft will run on after the trigger has been released.
- Wear close fitting apparel, remove jewellery and tie long hair back to prevent the risk of being drawn in.
- Ensure any sparks generated pose no threat of ignition to stored gas or fluid.
- In the event of an air line failing the whipping compressed air hose poses a risk of injury or damage to property. Isolate the air hose from the supply quickly and safely.
- Personal protective safety glasses shall be worn. Gloves and protective clothing are recommended.
- Assess the need for personal protection and the provision for dust collection appropriate for the material to be worked on.
- Die grinders are not insulated for coming into contact with electric power sources.
- Die grinders shall not be used in explosive atmospheres unless specially designed for that purpose. This product is not designed for that type of atmosphere.

### 5.5 RESIDUAL RISK



#### **Warning!**

- Although the safety instructions and operating manuals for our tools contain extensive instructions of safe working with power tools, every power tool involves a certain residual risk which can not be completely excluded by safety mechanisms. Power tools must therefore always be operated with caution!



## 6. TECHNICAL DESCRIPTION

### 6.1 IDENTIFICATION



## 6. TECHNICAL DESCRIPTION



- (12) Collet nut.
- (13) Output shaft.
- (14) Composite body.
- (15) Air flow (speed) selector.
- (16) 1/4" BSP (female air inlet).
- (17) Exhaust.
- (18) Trigger.
- (19) Trigger safety lever.



- (20) Retaining spring thread.
- (21) Trigger.
- (22) Exhaust port.
- (23) 1/4" BSP (female) air inlet.



## 7. UNPACKING AND CHECKING

---

### 7.1 PACKAGING

Carefully remove the product from the packaging and examine it for any sign of damage that may have happened during shipping. Lay the contents out and check them against the parts shown below. If any part is damaged or missing; please contact the Draper Helpline (the telephone number appears on the Title page) and do not attempt to use these products.

The packaging material should be retained at least during the guarantee period: in case the product needs to be returned for repair.



#### Warning!


- Some of the packaging materials used may be harmful to children. Do not leave any of these materials in the reach of children.
- If any of the packaging is to be thrown away, make sure they are disposed of correctly; according to local regulations.

## 7. UNPACKING AND CHECKING

### 7.2 WHAT'S IN THE BOX?

As well as the air tools there are a number of accessories not fitted or attached.

- |      |   |      |   |
|------|---|------|---|
| (24) | Retainer spring   | (39) | 1/4" female coupler                     |
| (25) | 4mm hex key   | (40) | 7x male hose quick connectors           |
| (26) | Swivel connector  | (41) | 1/2" dr. 75mm extension bar             |
| (27) | Tyre chuck  | (42) | Oil pot                                 |
| (28) | Air blow gun  | (43) | 2x hand wrench                          |
| (29) | Air duster  | (44) | Mini oiler                              |
| (30) | PTFE tape   | (45) | 1/4" female & male hose connector       |
| (31) | 4x 120mm round shank chisels  | (46) | 1/4" both ends with male hose connector |
| (32) | 1" sanding drum   | (47) | 3/8" dr. (F) - 1/2"dr. (M) adaptor      |
| (33) | 3/4" sanding drum   | (48) | 2x collets 3 & 6mm                      |
| (34) | 5x 1" sanding drum sleeves  | (49) | Rubber nozzle                           |
| (35) | 5x 3/4" sanding drum sleeves  | (50) | Tapered nozzle                          |
| (36) | 8x 1/2" dr. impact sockets: 12, 13, 17, 19mm, 1/2", 9/16", 5/8", 11/16" | (51) | Inflating nozzle                        |
| (37) | 5x 6mm mounted grinding stones  | (52) | High pressure nozzle                    |
| (38) | 5x 3mm mounted grinding stones  | (53) | Safety nozzle                           |

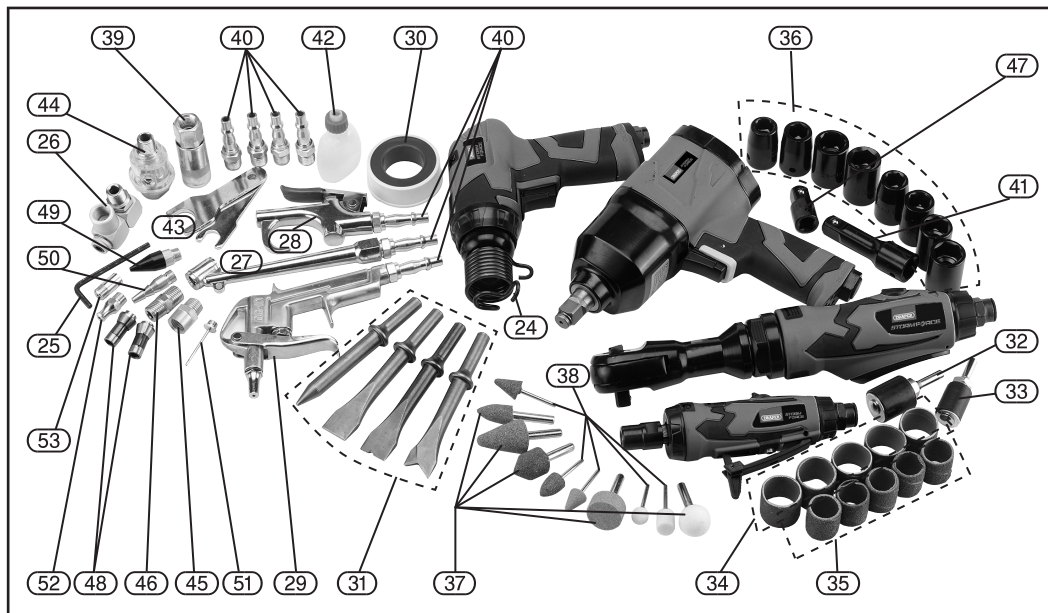

# 8. ASSEMBLY



**Warning!**

- Failure to follow these instructions will lead to premature malfunction of the equipment which is not covered by the guarantee.

## 8.1 AIR TOOL OIL SPECIFICATION

Air tool oil viscosity refers to it's properties to flow and how it reacts with heat. A low viscosity is thinner than a high viscosity.

Air tool oil becomes thinner as it heats so choosing the right viscosity is essential. If the viscosity is too low it may provide insufficient lubrication when heated. Equally, if it is too high, the fluid may provide excessive resistance to move through the lines when cold.

The ISO (International Standards Organisation) viscosity grading system measures the kinematic viscosity in centistokes (cSt) at 40° which is todays accepted standard. The SAE (Society of Automotive Engineers) viscosity grade value is based on a scale.

This equipment is suited to an ISO grade 22 – 32 (SAE grade 5W – 15W) monograde oil.

The oil must be constantly supplied to the equipment during use to ensure complete lubrication and optimum performance is achieved. It also acts as a rust inhibitor when the equipment is not in use.

We recommend the use of Draper Air Tool Oil:


250ml	<b>Stock No.34679</b>
500ml	<b>Stock No.34681</b>
1Litre	<b>Stock No.34682</b>

This air tool operates at a maximum pressure of 90psi and must be controlled via a combination pressure regulator, in-line lubricator and moisture filter such as the Draper range (see you local Draper stockist) which with proper maintenance will ensure a constant supply of dry air and lubricating oil at all times (see illustration below). Always check machine operating pressure before use.

Water in the compressor tank will cause serious corrosion to your air tools and should be drained daily to avoid excessive water in your air supply. Dirty wet air rapidly shortens the life of your air tool.

If you are using an air tool on a hose over 25ft long it is advisable to increase the bore of the hose to the next larger size available, i.e., 1/4" increases 3/8". This will ensure adequate pressure and volume of air to power the machine.

## 8.2 RECOMMENDED AIR SUPPLY SET UP

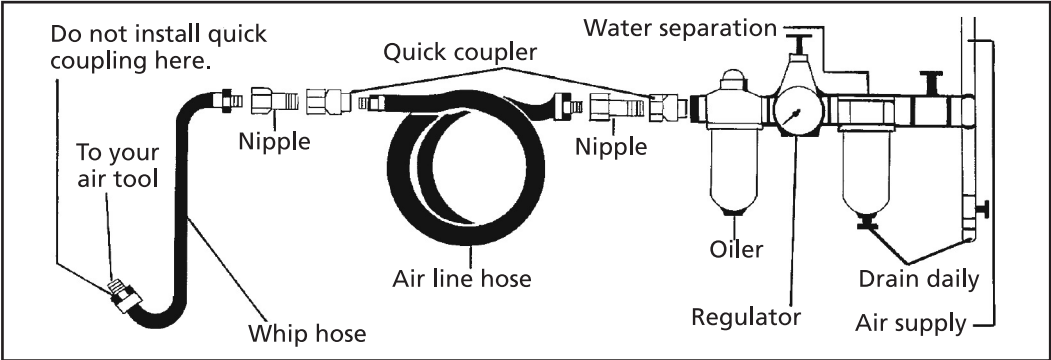

After each use and before prolonged storage, lubricate the equipment with approximately 1.5ml of air tool oil directly down the air inlet.

## 8. ASSEMBLY



### Warning!

- Failure to follow these instructions will lead to premature malfunction of the equipment which is not covered by the guarantee.

### 8.3 CONNECTION TO THE AIR SUPPLY – FIGS. 1 - 2

To connect the air tool to an air line, a 1/4" BSP male thread whip hose (54)\*\* will be required.

- Wind a length of PTFE tape (30)\* around the thread of the whip hose.
- Attach the hose via the 1/4" BSP (female) air inlet. The connection must be tight for an airtight union.

*PTFE tape	<b>Stock No.63389</b>
**1/4"BSP whip hose	<b>Stock No.54438</b>

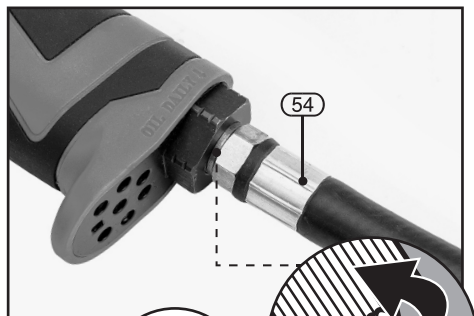


FIG.1



FIG.2

## 9. OPERATION AND USE

**Note:** Disconnect the air supply before carrying out adjustment, servicing or maintenance.

### IMPACT WRENCH

#### 9.1 TRIGGER SWITCH - FIG. 3

**Note:** Before connecting the impact wrench to the air supply reduce the line pressure according to the specification.

Confirm direction of rotation prior to starting. Pull trigger ① to operate the impact wrench.

Release the trigger to stop the impact wrench. The anvil and accessory will continue to rotate briefly after the trigger has been released.

**Note:** Before tool operation and work commences, ensure the compressor reservoir is drained of condensation along with all connected air lines. Check and drain the air line regulator's water trap and fill up the lubrication reservoir.

#### 9.2 FORWARD/REVERSE SPEED SELECTION - FIG. 4

The impact wrench has 3 forward speeds and two reverse speeds. Turn the combined directional speed switch ④ to engage the speed appropriate for the task in hand.

**Note:** Disconnect the air supply before carrying out adjustment, servicing or maintenance.

#### 9.3 ANVIL - FIG. 5

Ensure the anvil ring ③ is correctly maintained and if damaged or missing is replaced immediately before work commences.

Ensure the socket correctly locates on the anvil firmly engaging on the anvil ring ③.

**Note:** It is natural for the socket to resist removal.

**Warning:** Only use accessories specifically hardened and designed for use with impact tools\*.

Do not use standard chrome type hand tool sockets and accessories as they may shatter and splinter.

\* Example: Draper 19 piece ½" impact socket set Stock No.54651

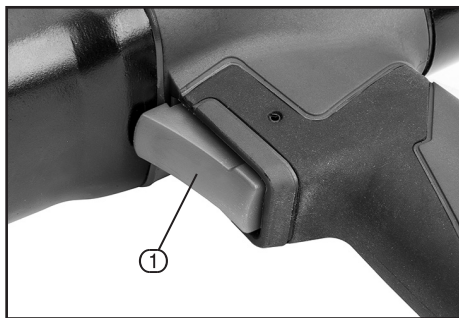


FIG.3

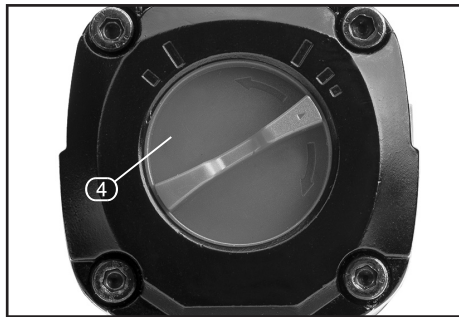


FIG.4

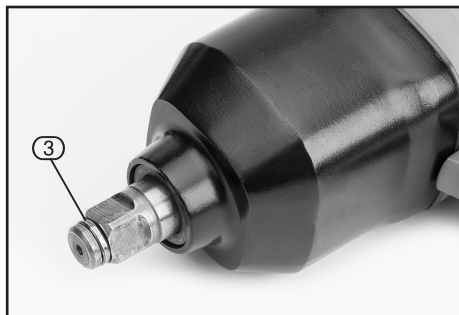


FIG.5

## 9. OPERATION AND USE

**Note:** Disconnect the air supply before carrying out adjustment, servicing or maintenance.

### RATCHET WRENCH

#### 9.4 TRIGGER SWITCH - FIG. 6

**Note:** Before connecting the air ratchet to the air supply reduce the line pressure according to the specification.

Confirm direction of rotation prior to starting. Pull trigger (7) to operate the air ratchet.

Release the trigger to stop the air ratchet.

**Note:** Before tool operation and work commences, ensure the compressor reservoir is drained of condensate along with all connected air lines. Check and drain the air line regulator's water trap and fill up the lubrication reservoir.

#### 9.5 FORWARD/REVERSE SELECTION - FIG. 7

**Note:** Air ratchets are not torque wrenches and are not designed or capable of installing fasteners to a specified torque. For fasteners requiring a specific torque, use a hand torque wrench.

Rotate the selector (10) anti-clockwise to select forward or clockwise for reverse operations.

#### 9.6 SPEED REGULATION - FIG. 8

Rotate selector (11) to regulate the speed most appropriate for the application.



FIG.6

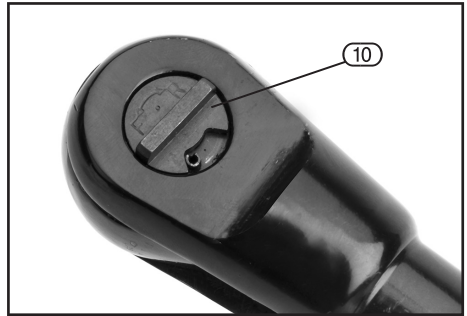


FIG.7

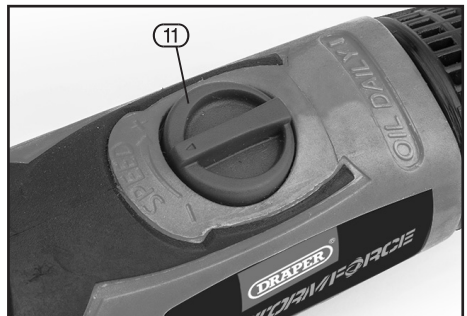


FIG.8

## 9. OPERATION AND USE

### 9.7 ANVIL - FIG. 9

Ensure the socket correctly locates on the anvil (8) firmly engaging on the locating ball (8.1).

**Warning:** Only use accessories specifically hardened and designed for use with impact tools. Do not use standard chrome type hand tool sockets and accessories as they may shatter and splinter.

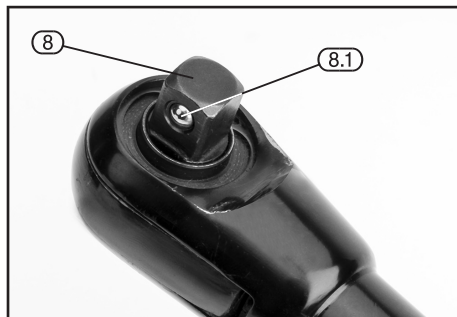


FIG.9

### 9.8 EXHAUST PORT - FIG. 10

Adjust the exhaust port (9) away from yourself and ensure it does not agitate any dust in close proximity.



FIG.10



## 9. OPERATION AND USE

**Note:** Disconnect the air supply before carrying out adjustment, servicing or maintenance.

### DIE GRINDER

#### 9.9 INSERT TOOL - FIG. 11

**Warning:** Select the grinding point appropriate for the application, speed rated to the die grinder and with the correct shaft diameter for the collet.

Inspect the grinding point before use. Do not use chipped, cracked or otherwise defective products. With the output shaft (13) held, loosen the collet nut (12) with the other spanner. Insert the grinding point shaft observing the minimum gripping length of 10mm. Secure the grinding point by tightening the collet nut fully.

**Note:** Never tighten the collet nut without an insert tool in the collet as damage will occur. Before storage remove insert tool to prevent distortion of the collet.

**Note:** Always wear safety goggles.

**Warning:** Never attempt to install cutting off wheels or router bits.

#### 9.10 TRIGGER - FIG. 12

Due to the risk of unintentional starting, the die grinder requires two separate and dissimilar actions to power the tool.

Pivot the trigger release lever (19) forward. This allows the trigger (18) to be pulled in toward the body of the grinder.

#### 9.11 AIR FLOW (SPEED) SELECTOR - FIG. 13

Rotate selector (15) to regulate the speed most appropriate for the application.

Rotate clockwise to increase, anti-clockwise to decrease the air flow/speed.

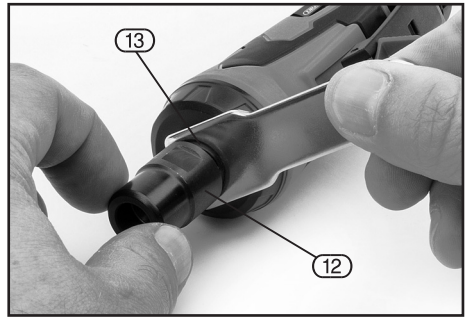


FIG.11



FIG.12

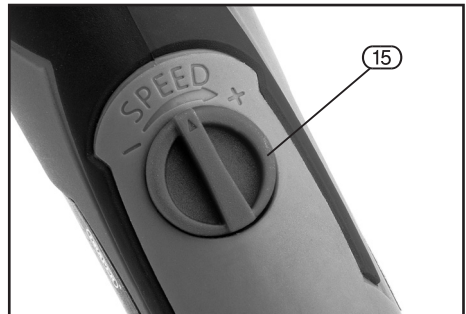


FIG.13



## 9. OPERATION AND USE

**Note:** Disconnect the air supply before carrying out adjustment, servicing or maintenance.

### AIR HAMMER

#### 9.12 CONNECTING CHISELS - FIG. 14

Attach the retaining spring onto the nozzle of the air hammer by screwing it in a clockwise direction.

Insert the chisel using the hooked end of the spring to hold the chisel in place.



FIG.14

#### 9.13 TRIGGER SWITCH - FIG. 15

**Note:** Before connecting the hammer to the air supply reduce the line pressure according to the specification.

- Pull trigger (21) to operate the hammer.
- Release the trigger to stop the hammer.

**Note:** Before tool operation and work commences, ensure the compressor reservoir is drained of condensate along with all connected air lines. Check and drain the air line regulator's water trap and fill up the lubrication reservoir.

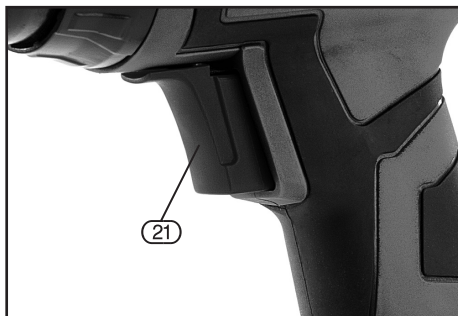


FIG.15

#### 9.14 DUST AND SWARF

A correctly fitted dust mask, suitable for the activity and in accordance to the relevant standard, must be worn.

For work activities involving exposure to fine wood dust, a mask rated to at least FFP2 should be used.

The burr left on the workpiece edge is also sharp and should be removed with a suitable tool.

Always wear safety goggles.

**Note:** Disconnect from the air supply before carrying out adjustment, servicing or maintenance.

# 10. MAINTENANCE

---

## 10.1 EVERY-DAY MAINTENANCE CHECKS

Before connection to the air supply:

- Drain the compressor reservoir of condensate.
- Drain the air lines of condensate.
- Drain the combined separator filter, regulator, water trap.
- Fill up the combined separator filter, regulator, lubricant reservoir.
- Check the line pressure is correct for the tool.

## 10.2 AFTER USE MAINTENANCE CHECKS

- Repeat the above procedures.
- Lubricate the tool with approximately 1.5ml of oil directly down the air inlet.

# 11. TROUBLESHOOTING

## 11.1 TROUBLESHOOTING GUIDE

Problems	Possible cause	Required action
Tool runs slowly. Air flows slightly from exhaust.	<ul style="list-style-type: none"> <li>Motor parts jammed with dirt particles.</li> <li>Power regulator in closed position.</li> <li>Air flow blocked by dirt.</li> </ul>	<ul style="list-style-type: none"> <li>Check air inlet filter for blockage.</li> <li>Pour air tool lubricating oil into air inlet as per instructions.</li> <li>Operate tool in short bursts, quickly reversing rotation back and forth.</li> </ul>
Motor will not run. Exhaust air flows freely.	<ul style="list-style-type: none"> <li>One or more motor vanes stuck due to material build up.</li> <li>Motor seized due to rust.</li> </ul>	<ul style="list-style-type: none"> <li>Pour air tool lubricating oil into air inlet.</li> <li>Operate tool in short bursts of forward and/or reverse rotation (where applicable).</li> <li>Tap motor housing gently with plastic mallet.</li> <li>Disconnect supply, free motor by rotating drive shank manually.</li> <li>If tool remains jammed, return to service centre.</li> </ul>
Sockets will not stay on.	<ul style="list-style-type: none"> <li>Worn anvil ring.</li> </ul>	<ul style="list-style-type: none"> <li>Replace anvil ring.</li> </ul>
Drive shank wear.	<ul style="list-style-type: none"> <li>Worn sockets or using conventional chrome plated sockets.</li> </ul>	<ul style="list-style-type: none"> <li>For any air tools, do not use chrome plated conventional sockets under any circumstances as this is a highly dangerous practice. Use only high quality impact sockets as listed in the Draper Catalogue. Chrome plated sockets can shatter and cause injury.</li> </ul>
Tool runs at normal speed but loses power under load.	<ul style="list-style-type: none"> <li>Motor parts worn.</li> <li>Cam clutch worn or sticking due to lack of lubricant.</li> </ul>	<ul style="list-style-type: none"> <li>Lubricant clutch housing.</li> <li>Check for excess clutch oil. Clutch cases need only be half full. Overfilling can cause drag on high speed clutch parts. A typical oil, lubricated wrench only requires 1/2 ounce of clutch oil.</li> </ul> <p><b>Grease Lubricated: Note:</b> Heat usually indicates insufficient grease in chamber. Severe operating conditions may require more frequent lubrication.</p>
Tool will not shut off.	<ul style="list-style-type: none"> <li>Throttle valve 'O' ring broken or unseated.</li> <li>Throttle valve stem bent or jammed with dirt particles.</li> </ul>	<ul style="list-style-type: none"> <li>Replace new 'O' rings.</li> <li>Lubricate trigger with air tool lubricating oil. If trigger remains jammed return to service centre.</li> </ul>

We recommend the use of Draper Air Tool Oil:	250ml	<b>Stock No.34679</b>
	500ml	<b>Stock No.34681</b>
	1Litre	<b>Stock No.34682</b>

## 12. DISPOSAL

---



### 12.1 DISPOSAL

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- During decommissioning of the equipment, certain hazards should be understood and avoided:
  - Only with the line pressure released shall the equipment be disassembled.
  - Goggles should be worn.

# 13. EXPLANATION OF SYMBOLS

---

## 13.1 EXPLANATION OF SYMBOLS



Read the instruction manual.



Wear safety glasses.



Wear ear defenders.



Wear protective gloves.



Long and loose hair must be contained or securely tied back.



Do not abandon into the environment.



Keep out of the reach of children.



**Warning!**



**Warning!** Risk of crushing.



Direction of rotation.





## CONTACTS

Draper Tools Limited, Hursley Road,  
Chandler's Ford, Eastleigh, Hampshire. SO53 1YF. U.K.

Helpline: (023) 8049 4344

Sales Desk: (023) 8049 4333

Internet: [drapertools.com](http://drapertools.com)

E-mail: [sales@drapertools.com](mailto:sales@drapertools.com)

General Enquiries: (023) 8026 6355

Service/Warranty Repair Agent:

For aftersales servicing or warranty repairs, please contact the  
Draper Tools Helpline for details of an agent in your local area.

### YOUR DRAPER STOCKIST

DBCM0719

©Published by Draper Tools Limited.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise without prior permission in writing from Draper Tools Ltd.