

BATTERY OPERATED

DEF/ADBLUE PUMP

07030

Version 1: December 2024
First release

Read this manual in full before using this product and retain it for future use. Always use the latest version of the manual. Please visit drapertools.com/manuals for the latest version.

1. Intended Use

This battery-operated pump is designed for quick and easy transfer of a wide range of fluids. The pump will fit 20 Litre drums/buckets and is self-priming. For use with Water, Gasoline, Diesel, Light Oils, Kerosene, Diesel Exhaust Fluid (DEF/ Adblue), Antifreeze, Windshield Washer Fluid, Mild Detergents & Agricultural Chemicals.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

2. Specification

Stock No.:	07030
Part No.:	BOD/APP
Drum size:	20litres
Flow Rate:	10 L/min
Batteries required:	2 × D /LR20 (not supplied)
Operating Temperature:	5 – 40°C
Flexible Hose Length:	600mm
Operating Temperature:	5 - 40°C
Recommend Use:	Diesel, kerosene, light oils, diesel exhaust fuel, water, antifreeze, mild detergents and agricultural chemicals.

3. Health and Safety Information

Important: Read all the Health and Safety instructions before attempting to operate, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user or the product.



WARNING!

- **DO NOT** run the pump dry.
- **DO NOT** use with acids, acetone, benzene, cresol, concentrated caustic soda, liquid thinner or other solvents.
- **DO NOT** use with deteriorated or contaminated liquids or fuels.
- **DO NOT** use the pump for hot liquids above 40°C.
- **DO NOT** operate the pump for longer than 15 minutes without a 30-minute rest.
- **DO NOT** turn the pump upside down after use.
- **ALWAYS** ensure the pump is turned '**OFF**' and liquid has been drained from the pump before cleaning.
- **DO NOT** use abrasives or solvents to clean the pump.
- **ALWAYS** wear suitable protective clothing and eye protection.
- Wear suitable protective gloves to avoid repeated and prolonged contact of fluids with the skin.
- Keep the work area clean and dry. **DO NOT** use in damp or wet areas.
- **DO NOT** modify the pump and **DO NOT** use for a purpose it was not intended.
- Before using the pump check for damaged parts and that it operates correctly. Replace any damage parts immediately.
- Keep the pump away from heat and sharp edges. Before each use check the pump for wear and ensure all connections are secure.

Draper Tools

Draper Tools Limited
Hursley Road, Chandler's Ford
Eastleigh, Hampshire, SO53 1YF UK

Website: drapertools.com

Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344

Telephone Sales Desk: +44 (0) 23 8049 4333


General Enquiries: +44 (0) 23 8026 6355

Delta International

Delta International BV
Oude Graaf 8
6002 NL
Weert
Netherlands


4. Identification

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment. If any part is damaged or missing, do not attempt to use the product. Please contact the Draper Helpline; contact details can be found at the back of this manual.

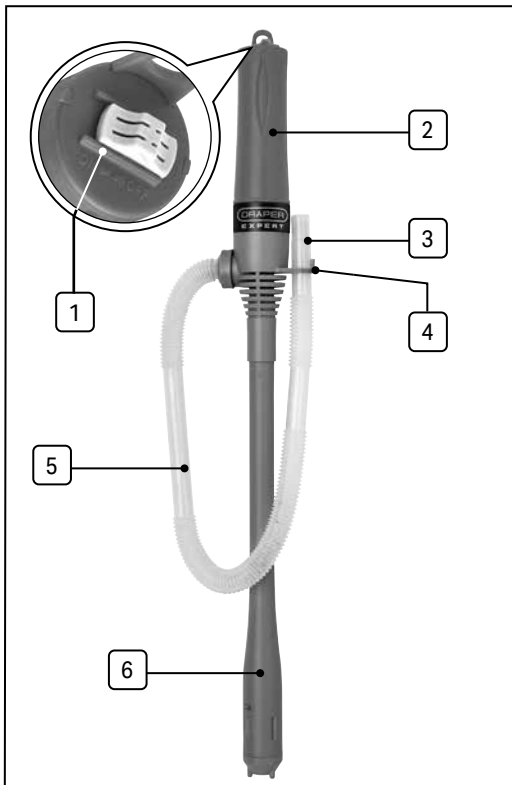

1. **ON/OFF** switch
2. Battery compartment
3. Nozzle
4. Nozzle holder
5. Flexible transfer hose
6. Suction tube

5. Fitting or Replacing Batteries

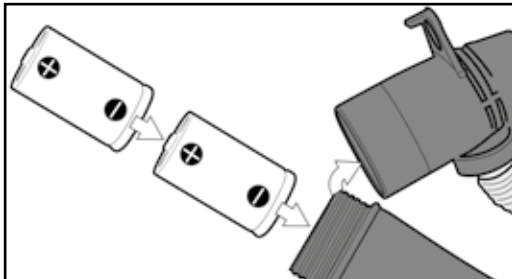

2 × D batteries required (not supplied).

1. Unscrew the battery compartment **2**.
2. Fit 2 x D batteries – ensure the correct +/- orientation.
 - Refer to the guide marked on the battery compartment.
3. Refit the battery compartment securely.

6. Operating the Pump

1. Insert the end of the suction tube **[6]** into the container/drum with the fluid to be transferred from.
2. Place the end of the nozzle **[3]** into the container that the fluid is being transferred into.
3. Slide the switch **[1]** to the **'ON'** position to start dispensing the fluid.

7. Maintenance, Storage and Disposal

- **ALWAYS** ensure the pump is turned '**OFF**' and liquid has been drained before cleaning or carrying out any maintenance.
- **DO NOT** use abrasives or solvents to clean the pump.
- Store the nozzle in the holder after use.
- Remove the batteries if being stored for a prolonged period.
- At the end of its working life, dispose of the product responsibly and in line with local regulations. Recycle where possible.
- **DO NOT** dispose of this product with domestic waste; most local authorities provide appropriate recycling facilities.



- **DO NOT** burn or mutilate batteries; this may release toxic or corrosive substances.



9. Warranty

12 months from date of purchase –
Visit **[drapertools.com/warranty](https://www.drapertools.com/warranty)** for full details.

10. Symbols



Read the instruction manual



WEEE – Waste Electrical & Electronic Equipment
Do not dispose of Waste Electrical & Electronic Equipment in with domestic rubbish



European conformity



UK Conformity Assessed



Warning!



Do not incinerate or throw
onto fire



Wear suitable eye protection



Wear suitable personal protective equipment (PPE)