



METAL KICKSTOOL

59246

Health and Safety Information

Important: Read all the Health and Safety instructions before attempting to use, maintain or repair this product. Failure to follow these instructions may result in injury or damage to the user or, the product.

 Read this manual in full before using this product and retain it for future use.




WARNING! Risk of fall from the stool.

- DO NOT exceed the maximum weight capacity of 150kg.
- DO NOT use if damaged. Before each use, visually inspect the stool to ensure it is not damaged and safe to use.
- Ensure the stool is suitable for the task to be carried out.
- Check that the castor wheels are correctly and securely fitted before use.
- DO NOT use on an unlevel or uneven surface.
- Ensure the base sits firmly on the floor before using.



- DO NOT use if the stool slips or slides when under load. The step should not move when weight is applied.
- Wear suitable non-slip footwear when using this stool.
- DO NOT overreach.
- DO NOT use the stool to access heavy items stored at height.
- **DO NOT** carry items which are heavy or difficult to handle when using this stool.

Assembling the Castor Wheels

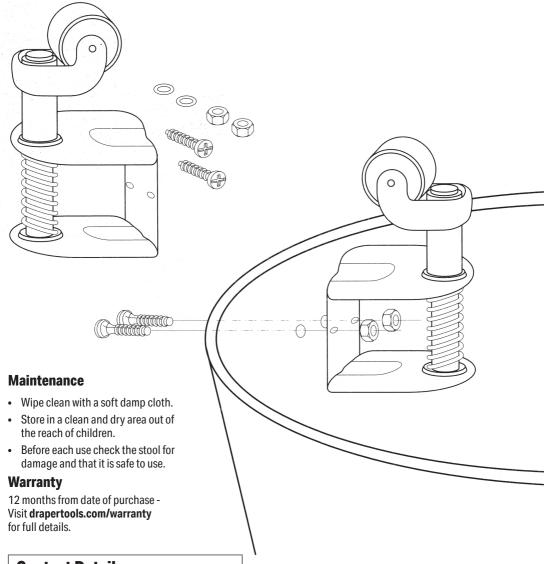

Contact Details

Draper Tools

Draper Tools Limited Hursley Road Chandler's Ford Eastleigh Hampshire S053 1YF IJK

Delta International

Delta International BV Oude Graaf 8 6002 NL Weert Netherlands

Website: drapertools.com Email: sales@drapertools.com

Product Helpline: +44 (0) 23 8049 4344 **Telephone Sales Desk:** +44 (0) 23 8049 4333 General Enquiries: +44 (0) 23 8026 6355

Please contact the Draper Tools Product Helpline for repair and servicing enquiries.